

## Accessories for NJ / NJR

### NJ-80 Nejikura Hopper



- Compatible with NJ and NJR screw feeder.
- Floor type screw hopper to increase refill intervals for the NJ/NJR screw feeder.
- A sensor detects the amount of screws in the receptacle of the Quicher, and refills the optimum amount of screws automatically.
- No mounting brackets necessary, simply place the NJ-80 behind the NJ/NJR.
- Hopper capacity is 800cc (equivalent to 20,000pc M2.3 x 5 screws or 5,600pc M3.0 x 6 screws)
- For M1.7 to M5.0
- Power: 110VAC, 50/60 Hz
- Dimensions: 142W x 191D x 188H (mm)

### T-510 Nejikura Hopper



- Compatible with NJ/NJR/NSB/NSR screw feeder.
- Tower type screw hopper to increase refill intervals for the NJ/NJR/NSB/NSR screw feeder.
- A sensor detects the amount of screws in the receptacle of the Quicher, and refills the optimum amount of screws automatically.
- Hopper capacity is 400cc (equivalent to 10,000pc M2.3 x 5 screws or 2,800pc M3.0 x 6 screws)
- Increases to 800cc with an additional hopper.
- For M1.0 to M5.0.
- Power: 100-240VAC, 50/60 Hz
- Dimensions: 130W x 171D x 245H (mm)  
(with additional hopper 295H)

### Replacement Rails



- See part number of previous page.
- Escaper and passage plate must be purchased with replacement rails.

### Batch Counter



- All NJ Quichers are available in NJC type which includes screw batch counter.

### Desktop Robot



- Use NJR with JR series desktop robots with fastening driver for complete fastening automation.