## TAURUS series

### Pneumatic-



#### Working range

Blind rivets from 2.4 to 3.2 mm  $\varnothing$  all materials and up to 4 mm  $\varnothing$  alu/steel (max. mandrel dia. 2.5 mm)


#### **Technical data**

Weight: 1.3 g Operating air pressure: 5-7 bar Air hose connection: 6 mm  $\varnothing$  (1/4") Air consumption: approx. 1.0 ltr. per rivet Traction power: 4,200 N at 5 bar Stroke: 15 mm

#### Nosepieces / accessories

Nosepieces

17/18, 17/24 and 17/27
Maintenance wrench SW12/14, SW14/17
1 hydraulic oil bottle 100 ml
1 oil refill can
Operating instructions with spare parts list

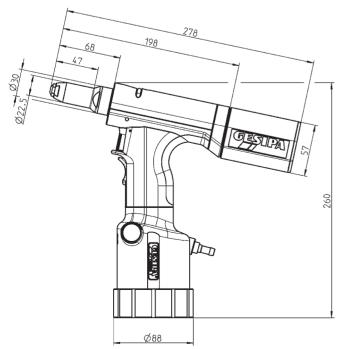



#### Working range

Blind rivets up to 5 mm  $\varnothing$  all materials and up to 6 mm  $\varnothing$  alu/steel (max. mandrel  $\varnothing$  3.2 mm)

#### **Technical data**


Weight: 1.6 g Operating air pressure: 5-7 bar Air hose connection: 6 mm  $\varnothing$  (1/4") Air consumption: approx. 2.3 ltr. per rivet Traction power: 9,000 N at 5 bar Stroke: 18 mm

#### Nosepieces / accessories

Nosepieces

17/27, 17/29 und 17/32 und 17/36 Maintenance wrench SW12/14, SW14/17 1 hydraulic oil bottle 100 ml 1 oil refill can

Operating instructions with spare parts list

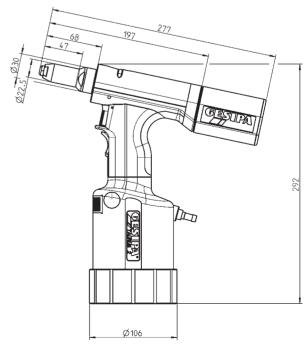

## hydraulic blind rivet setting tools



#### Working range


Blind rivets up to 6.4 mm Ø all materials (max. mandrel Ø 4.5 mm)

#### **Technical data**

1.9 g Weight: 5-7 bar Operating air pressure: 6 mm Ø (1/4") Air hose connection: approx. 4.8 ltr. per rivet Air consumption: Traction power: 14,000 N at 5 bar Stroke: 25 mm

#### Nosepieces / accessories

Nosepieces 17/36, 17/40 und 17/45 Maintenance wrench SW12/14, SW14/17 1 hydraulic oil bottle 100 ml 1 oil refill can Operating instructions with spare parts list

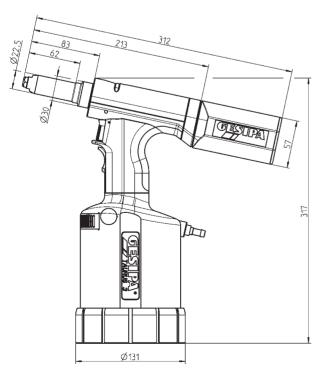



#### Working range

Blind rivets up to 6.4 mm Ø all materials and up to 8 mm Ø alu (max. mandrel Ø 4.5 mm)

#### **Technical data**

Weight: 5-7 bar Operating air pressure: 6 mm Ø (1/4") Air hose connection: approx. 4.8 ltr. per rivet 20,000 N at 5 bar Air consumption: Traction power: Stroke: 19 mm


#### Nosepieces / accessories

Nosepieces

17/36, 17/40 and 17/45 Maintenance wrench SW12/14, SW14/17 1 hydraulic oil bottle 100 ml

1 oil refill can

Operating instructions with spare parts list

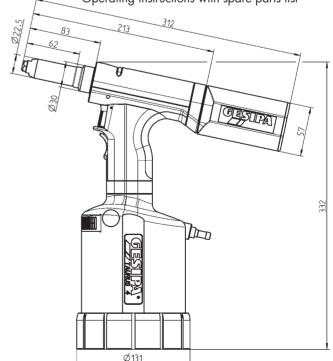

## TAURUS series

## **Pneumatic-**

## B P

#### **TAURUS 5**

Basic tool Part no. 760 0001

#### Working range

Blind rivets above 6.4 mm  $\varnothing$  all materials and lockbolts up to 10 mm  $\varnothing$  with corresponding pulling heads


#### Technical data

Weight: 3.4 g
Operating air pressure: 5-7 bar
Air hose connection: 6 mm Ø (1/4")
Air consumption: approx. 6.9 ltr. per rivet
Traction power: 42,000 N at 7 bar
Stroke: 17 mm

#### Nosepieces / accessories

1 hydraulic oil bottle 100 ml 1 oil refill can

Operating instructions with spare parts list

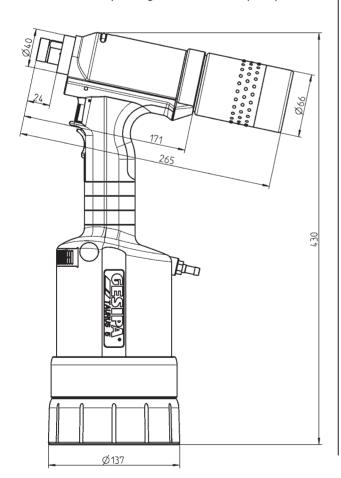

# Workin

#### TAURUS 6

Basic tool Part no. 761 0002

#### **Working range**

Blind rivets above 6.4 mm  $\varnothing$  all materials and lockbolts up to 10 mm  $\varnothing$  with corresponding pulling heads


#### Technical data

Weight: 3.4 g
Operating air pressure: 5-7 bar
Air hose connection: 6 mm Ø (1/4")
Air consumption: approx. 6.9 ltr. per rivet
Traction power: 50,000 N at 7 bar
Stroke: 15 mm

#### Nosepieces / accessories

1 hydraulic oil bottle 100 ml 1 oil refill can

Operating instructions with spare parts list

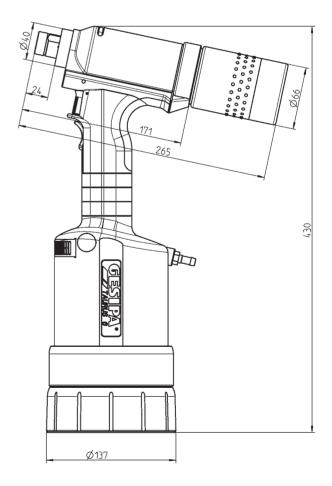

**TAURUS 5** and **6** need to be fitted with nosepieces to match the application.

Will be produced on request.